

## Expand and extend -- adding new space to Server (new HDDs)

Insert new HDDs. You Hill see NEW HDDs as unassigned Drive.


Select the logical drive – EXPAND option.

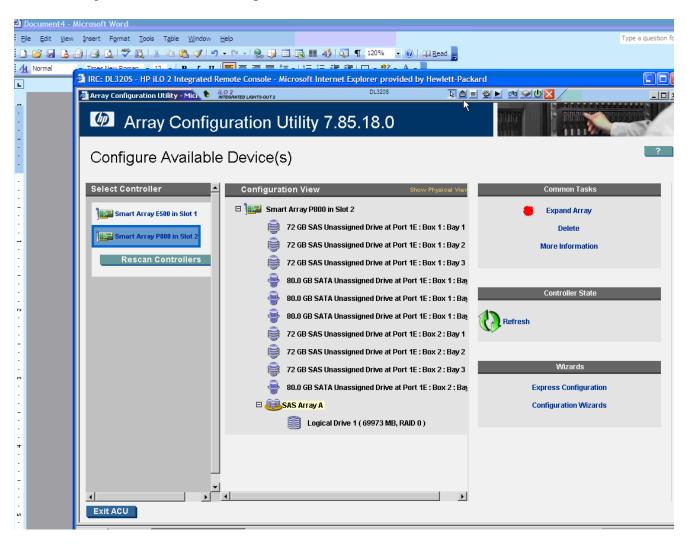


#### Select the HDD(s) to expand

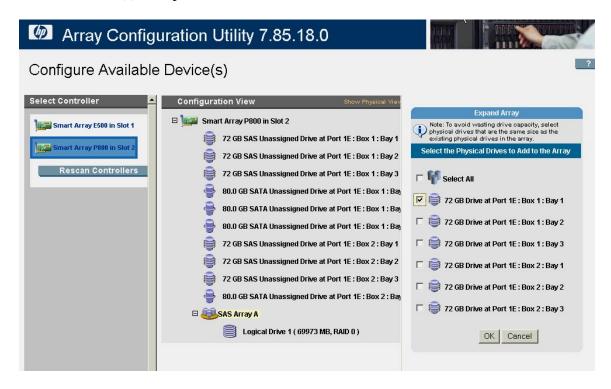


# Save changes

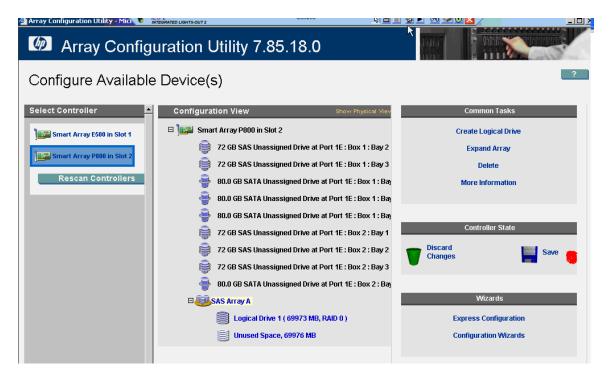


### EXPAND PROCESS taking some time

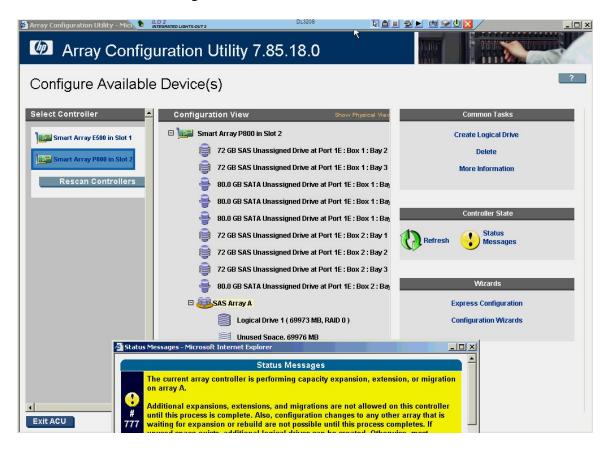

Checking expand %%% process Select logical drive and click more information

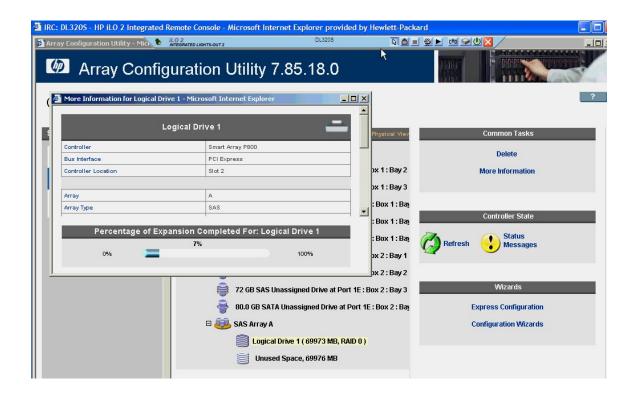


Once expand is finished – you can migrate - extend size or new logical drive (if you select the ARRAY A in this case)

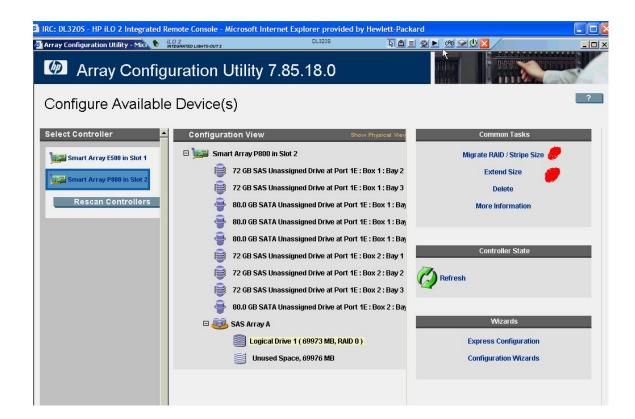

#### **EXTEND PROCESS**

Also that new HDD can be used to create a new logical drive, the normal procedure using extend is adding space to the existing logical drive

Select Maximum size as it says below the box

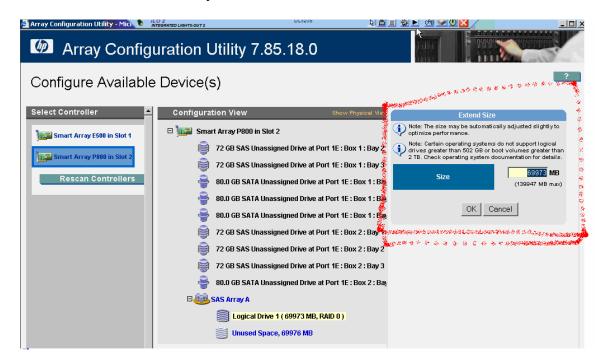

Save and wait until extend process finishes



After Save.

More Information to check extend %%%%.

After some time, you're going to get unused space in Disk Management. So use an utility to expand that space. It can be diskpart (for not C: partition) or any other partition tool.

