

```
System Options
Power Management Options
PCI IRQ Settings
PCI Device Enable/Disable
Standard Boot Order (IPL)
Boot Controller Order
Date and Time
Server Availability
Server Security
BIOS Serial Console & EMS
Server Asset Text
Advanced Options
System Default Options
Utility Language
```

```
IPL:1    CD-ROM
IPL:2    Floppy Drive (A:)
IPL:3    USB DriveKey (C:)
IPL:4    Hard Drive C: (See Boot Controller Order)
IPL:5    PCI Embedded HP Ethernet 1Gb 2-port 330i Adapter 1
```

Standard Boot Order (IPL) menu

The Standard Boot Order (IPL) option configures the Initial IPL device and controls the search order the server uses to look for a bootable device.

NOTE: If you enable or disable a device, restart the server. Changes do not take effect until after reboot.

```
Ctlr:1   PCI Embedded   HP Dynamic Smart Array B120i RAID Controller
```

Boot Controller Order menu

The Boot Controller Order option selects which of the installed mass storage device controllers is used as the primary boot controller. The server attempts to boot the drives attached to each storage controller in the order presented in this list.

By default, the primary boot controller is set to controller 1.

NOTE: Changes made to the Boot Controller Order in the ORCA Utility are reflected in this menu.

IMPORTANT: PCI devices that have been disabled in the PCI Devices menu might still be visible on the Boot Controller Order screen.