

PIN#	FUNCTION	DESCRIPTION
1-8,37-44	RTN	Power and Signal Return
9	SPARE	Spare position (No connection)
10, 12, 14, 16, 18,20,22, 24,26,28,30,32,34,36	+12V	+ 12V Output
11	RS RTN	Remote Sense Return
13	+12VRS	+ 12V Remote Sense
15	PSON#	Power-On Enable Input
17	HB	Hard Boot Input
19	12LS	12V Load Share Bus
21	DCOK	+12V Output OK Signal
23	PS KILL	Power Supply Fast Shutdown Input
25,27 29	5VSB	+5V Standby Output
31	-12V	-12V Output
33	FANV	Power Supply Fan Voltage Input
35	PRESENT#	Power Supply Present Signal